

MORE THAN JUST LOCKS

 


FUNCTION & OPERATION

OPERATION GUIDE


When no user is entered, any fingerprint and initial password 123456 can be unlocked. After registering the fingerprint or password, the illegal fingerprint and password card will not be unlocked; If no administrator is registered in the smart lock, you can use any fingerprint or initial password 123456 to enter the add mode. If an administrator has been registered in the smart lock, verify that the administrator is in the add mode before adding a user.

ADD USER




1. If no administrator is registered during the authentication, you can use any fingerprint or initial password 123456 # to add an administrator or user
2. The first three users are administrators, and the fourth or more users are common users
3. The valid digit of the digital password is 6, if it exceeds the length, it cannot be registered:
4. Fingerprint input for 5 consecutive times, password input for 2 consecutive times, card input for 1 time, the green light is on when the input is successful;
5. After the entry is successful, the system automatically sleeps. 6. The number of users is 200

VOLUME SETTING PROCESS

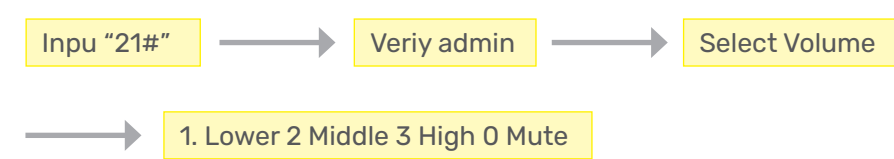


1. If there is no registered administrator in the system, enter "21#" and enter the initial password or any fingerprint to set the volume:
2. In the volume setting, only the 1, 2, and 3 keys can be selected. Selecting other keys is invalid, and the volume setting mode will appear
3. If the administrator deletes other numbers and records them again, the system automatically replaces them.

 SYSTEM INITIALIZE OPERATE




1. If no administrator is registered with the system, enter 888# to initialize the system
2. After the initialization, all user data is cleared and the system Settings are restored to default values


PASSAGE MODE SELECT OPERATE

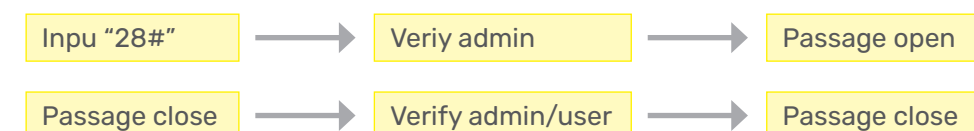

PHYSICAL KEY OPERATE

 


1. Short Press the Setting key (s1) to add the administrator/user function. If the system has registered an administrator, you can add only after verifying the administrator
2. Long press the Setting key (s1): to force the system to enter the initialization mode and initialize the system without verifying the administrator
3. Anti-lock key s2: push the s2 push button to S1 direction to open the anti-lock mode; The reverse direction is to turn off the anti-lock mode;
4. S1 long press is 5 seconds, shorter than 5 seconds will be considered as short press.

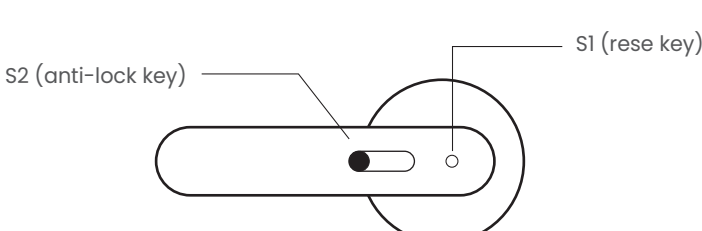

Note : After the anti-lock mode is turned on, only the first 3 administrators can open the anti-lock

PRODUCT PARAMETERS

No.	Function	Contents	Details
1.	Unlock ways	Fingerprint password card key	
2.	Admin 3	3	01-03
3.	User	200	01-200 (Fingerprint& password& card in total)
4.	Fingerprint.	100.	Fingerprint input 5 times (please input from different views)
5.	Card	100	Card input 1 time
6.	Password	100	Password input twice, confirm, (6 digit password number input keep same same exactly)
7.	Virtual Password leagth	<16 digits	This product has a virtual anti-peeping password: you can enter garbled characters before and after the registered password
8.	Lower power alarm	4.3V +0.2V	When the voltage is lower than 4.3V, the red indicator will continue to flash 5 times, and the lock can continue to be opened
9.	Static current	≤65UA	-
10.	Dynamic current	> 250mA	-
11.	Power Voltage	6V	New battery full power voltage
12.	Emergency power	5V DC	USB
13.	Working temperature	-25°C 70°C	-
14.	Working humidity	20%90%RH	-
15.	Fast sleep	"#" for fast sleep mode	long press #key fast exit system and go sleep mode

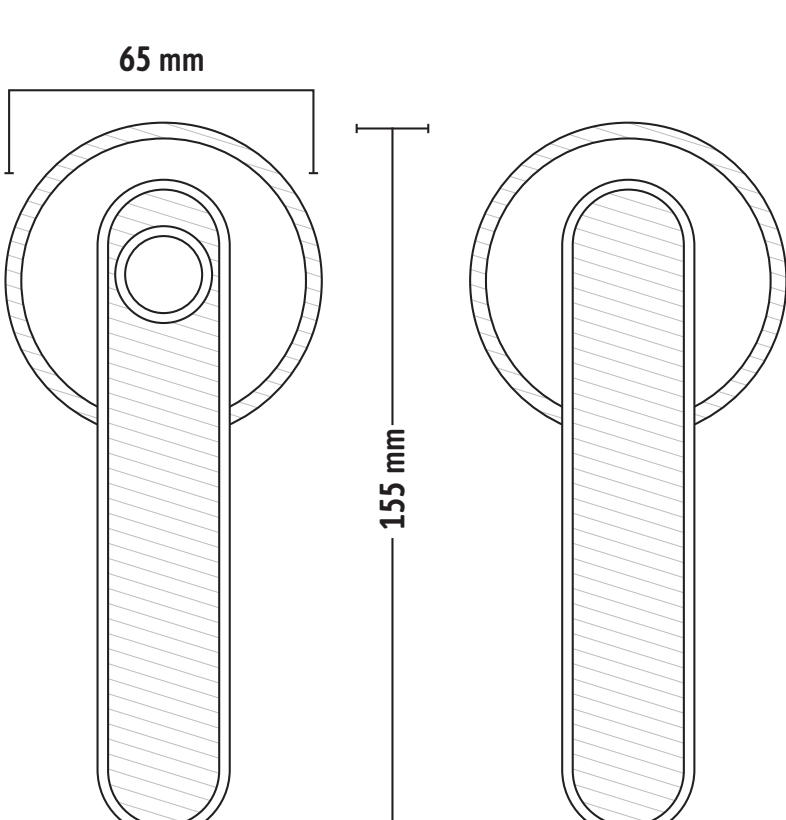

THANK YOU FOR YOUR PURCHASE

We're honored you chose **AUTOM8**

Experience the perfect blend of
SECURITY, TECHNOLOGY, AND ELEGANCE.

Welcome to the Future of Smart Living.