

SAFE AND SOUND, ALL AROUND



FINGERPRINT UNLOCK

1. In the initial state, any fingerprint can open the lock.
2. After registering the fingerprint, using non-recorded fingerprint cannot open the lock. Verify fingerprint successfully: green light, unlock; If the fingerprint verification fails, the red light blinks three times.

INITIAL FINGERPRINT ENTRY

Two fingerprints need to be entered continuously for the first time. When the registration timeout occurs, the system automatically exits the registration

1. Press any finger long until the blue light is on (sky blue), then lift the hand;
2. Press your finger ten times continuously until the green light on, indicating that the first fingerprint is successfully entered. Then, enter the second fingerprint when blue light is still on, ten-time pressing until the green light on.

Note : When recording fingerprints, press the finger once, then lift. Do not press it all the time. When recording, move it up and down, left and right, and avoid pressing the same part of the finger ten times.

ADD NEW FINGERPRINT

1. Use the recorded fingerprint to verify until the blue light on, move your hand.
2. Press the fingerprint you want to add for ten times until green light on, move your hand.

FACTORY DATA RESET

Method one : Press the recorded fingerprint, do not move when blue light or white light on. When red light on, release your hand. At this time, green light on once shows the factory settings are restored successfully.

Method two: Press reset button 5 seconds while use fingerprint, green light, the factory setting are restored successfully.

Method three: Emergency password restore factory settings, when the fingerprint cannot unlock normally, press and hold with any fingerprint until the white light flashes and release the finger. Then green light on, press the password number previously set (the default is 33).

For example, if the password is 56, press the fingerprint head five times and wait for the blue light on. After the blue light on, press the fingerprint head six times and wait for the indicator to turn off. If the verification is successful, the factory settings are successfully restored.

After factory Settings are restored, all fingerprints are deleted and the emergency password is restored to 33.

EMERGENCY PASSWORD SETTING

1. Unlock with the recorded fingerprint and press until the blue light is on (do not lift it). Release your hand until the white light is on.
2. Then the green light on. Fingerprint press once count once (For example press five times is the number 5) then waiting for the blue light;
3. After blue light on, press the second numbers (For example press six times is the number 6), then waiting for the light off.
4. The number pressed by the green light and the number pressed by the blue light form two digits (such as 56), this is your password.

ELECTRICAL SPECIFICATION

If the battery is low, the green light flashes once when unlocking, then the red light flashes three times (indicating low battery), and then the green light is on to unlock. Replace the battery immediately after opening the door.

When the battery power is insufficient to unlock, you can connect the charging bank or mobile plug for external power supply. After unlocking, immediately change the battery.

Note : Use 3XAAA alkaline batteries, not carbon batteries.

TECHNICAL PARAMETERS

DC	Three pieces 1.5V7H alkaline batteries	Operating temperature	-20°C J+65°C
Fingerprint	20 sets	Operating humidity	20%RH-85%RH
Factory reset	Built-in RST	Unlock mode	Fingerprint unlock
Install hole	15mm	Suitable thickness of plate	Above 16mm

THANK YOU FOR YOUR PURCHASE

We're honored you chose **AUTOM8**

Experience the perfect blend of
SECURITY, TECHNOLOGY, AND ELEGANCE.

Welcome to the Future of Smart Living.