



SAFE & SOUND ALL AROUND



OPERATING INSTRUCTION

THE EXPERIENCE OF UNLOCKING

1. Enter the factory default password 123, press OK to unlock; Three consecutive password entry errors, the system will be locked for 1 minute
2. The green light is on for 3 seconds, and a long beep indicates that the verification is successful. can unlock.

PRESS 1: CHANGE THE ADMINISTRATOR PASSWORD/ ADD ADMINISTRATOR CARD

The password consists of 3-15 digits. The administrator password can only be modified and not deleted, only accept 1 administrator card

1. Press 1 and C key, the green light will be on with a long beep, enter the setting state.
2. Verify permission When the green light is on, enter the factory default password 123 with OK The green light flashes three times quickly, which means the verification is passed,
3. Change administrator password. When the green light flashes, enter the new password with OK. Enter the new password with Ok again, The green light be on with a long beep, the setting is successful

4. Add administrator card: When the green light flashes, put the card near the card induction area, The green light be on with a long beep, the setting is successful.

PRESS 2 : ADD USER PASSWORD

The password consists of 3-15 digits. Can add maximum 20 groups user password

1. Press "2" and "C", the green light will be on with a beep, enter the adding state;
2. Verify permission: When the green light is on, enter the administrator password (Factory default is 123) and press OK to confirm Or use the administrator card: The green light flashes with beep three times quickly, which means the verification is passed;
3. When the green light flashes, enter the new user password and press OK to confirms, Enter it with OK again; The green light be on with a long beep, the setting is successful.

PRESS 3 : MODIFY THE USER PASSWORD

1. Press 3 and C key, the green light be on with a beep, enter the modified state
2. Verify permission: When the green light is on, enter the password you want to change, press OK to confirm; The green light flashes with beep three times quickly, which means the verification is passed;
3. When the green light flashes, enter the new user password with OK: Enter the new password with OK again; The green light be on and with a long beep, the setting is successful.

PRESS 3 : MODIFY THE USER PASSWORD

1. Public mode that is for public places, anyone can set temporary passerords or temporary cards in public mode
2. Aner setting the temporary pasend arzand only the temporary password e card and the administrator password can got
3. The bimposary poword and temporary card will become invalid after being used once

ENTER PUBLIC MODE

1. Press 4 and the C key, the green light be on with a beep, enter the setting state,
2. Verify permission: When the green light is on, enter the administrator password and press OK to confirm; Or use the administrator card. The green light is on with a beep, the lock tongue contracts automatically, which means the verification is passed

PUBLIC MODE TEMPORARY PASSWORD USAGE PROCESS

1. Press the OK key once, the lock opens and the green light flashes with beep:
2. When the green light flashes, enter the temporary password and press OK to confirm, The green light is on and beeps with the lock locking, showing the setting is successful.
3. User unlock. Input the temporary password and press OK to confirm, The green light be an with a long

beep, the setting is successful.

After successful unlocking, the password will become invalid

PUBLIC MODE TEMPORARY CARD USAGE PROCESS

1. Use any non-entered card to approach the card sensing area;
2. The green light is on and beeps with the lock locking automatically, indicating that the card is entered as a temporary card;
3. User unlock : Use the entered temporary card close to the card sensing area;
4. The green light be on with beep showing the verification is successful and the lock can be unlocked.

The temporary card will become invalid after successful unlocking in public mode, when the unlocking method has been used by a temporary password, you cannot create a temporary card.

Similarly, when the unlocking method has been used by temporary cards, temporary passwords can not be set

The administrator password can be unlocked at any time. When the administrator password or card is used to unlock, all temporary passwords and temporary cards become invalid.

EXIT PUBLIC MODE

1. Press 4 and C key. The red light is on and beeps to enter the exit state,
2. Verify permission: When the red light flashes, enter the administrator password and press the OK key to confirm; Or administrator card. The red light be on with a long beep and the lock tongue extending, the setting is successful;

PRESS 5: ADD USER CARD

1. Press 5 and the C key. The green light is on and beeps to enter the add state:
 2. Verify permissions. When the green light is on, enter the administrator password and press the OK key to confirm, Or administrator card. The green light flashes and beeps three times, indicating the verification is successful;
 3. When the green light flashes, put the card close to the card sensing area; Beep three times indicates a successful entry; The red light flashes twice with two beeps, indicating the entry failed;
- (Repeated entry or the entered quantity is full)

PRESS 6 : DELETE USER CARD

1. Press 6 and the C key. The green light be on with a beep, enter the delete state,
2. Verify permissions: When the green light is on, enter the administrator password and press the "OK" Or use the administrator card; The green light flashes and beeps three times quickly, indicating the verification is successful;
3. When the green light flashes, make the card close to the card sensing area to delete, Beep three times

indicates a successful deletion. Beep twice and red-light flashing indicates the card has not been recorded and the deletion failed.

RESTORE FACTORY SETTING


1. Press and hold the OK key, and there is a beep, beep, beep prompt tone, After about 10 seconds, the red light is on and beeps, releases your hand.
2. Verify permissions: enter the administrator password and press the OK key to confirm; Or use the administrator card. The green light and red light are both on with a long beep, indicating the verification is successful; After the factory settings are restored successfully: The user password user card and temporary password are deleted, the administrator password is restored to 123
3. When the password is forgotten, after unlocking, there is a factory reset key hole on the back of the lock. Press and hold the reset key until the red light on. Green light is on and beeps, indicating that factory reset is successful.

ELECTRIC QUANTITY SPECIFICATION

1. Low battery alarm: If red light flashes and beeps five times after unlocking, please replace batteries as soon as possible.
2. Emergency lock opening for power shortage: Use USB indirect mobile power supply to unlock.

TECHNICAL PARAMETERS

Administrator password/Card	Iset/Icard	DC	4 M batteries	operating temperature	20°C-55°C
User password	20 sets	Plate thickness requirements	Above 10ma	Usage mode	Private/Public/Temporary
Public mode password	1 set	Installation hole diameter	/	Lock housing material	Zinc alloy
User card	10 cards	Unlock time	Above 365 days		

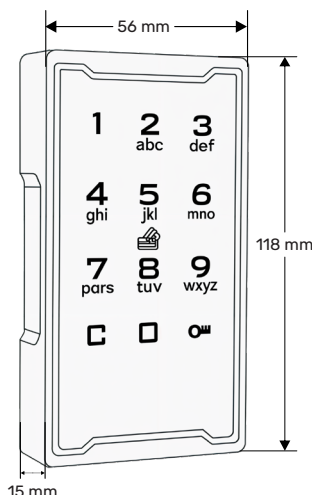

THANK YOU FOR YOUR PURCHASE

We're honored you chose **AUTOM8**

Experience the perfect blend of
SECURITY, TECHNOLOGY, AND ELEGANCE.

Welcome to the Future of Smart Living.