




CONTROL AT YOUR FINGERTIPS

autom8
Smart Lock

PRODUCT DESCRIPTION

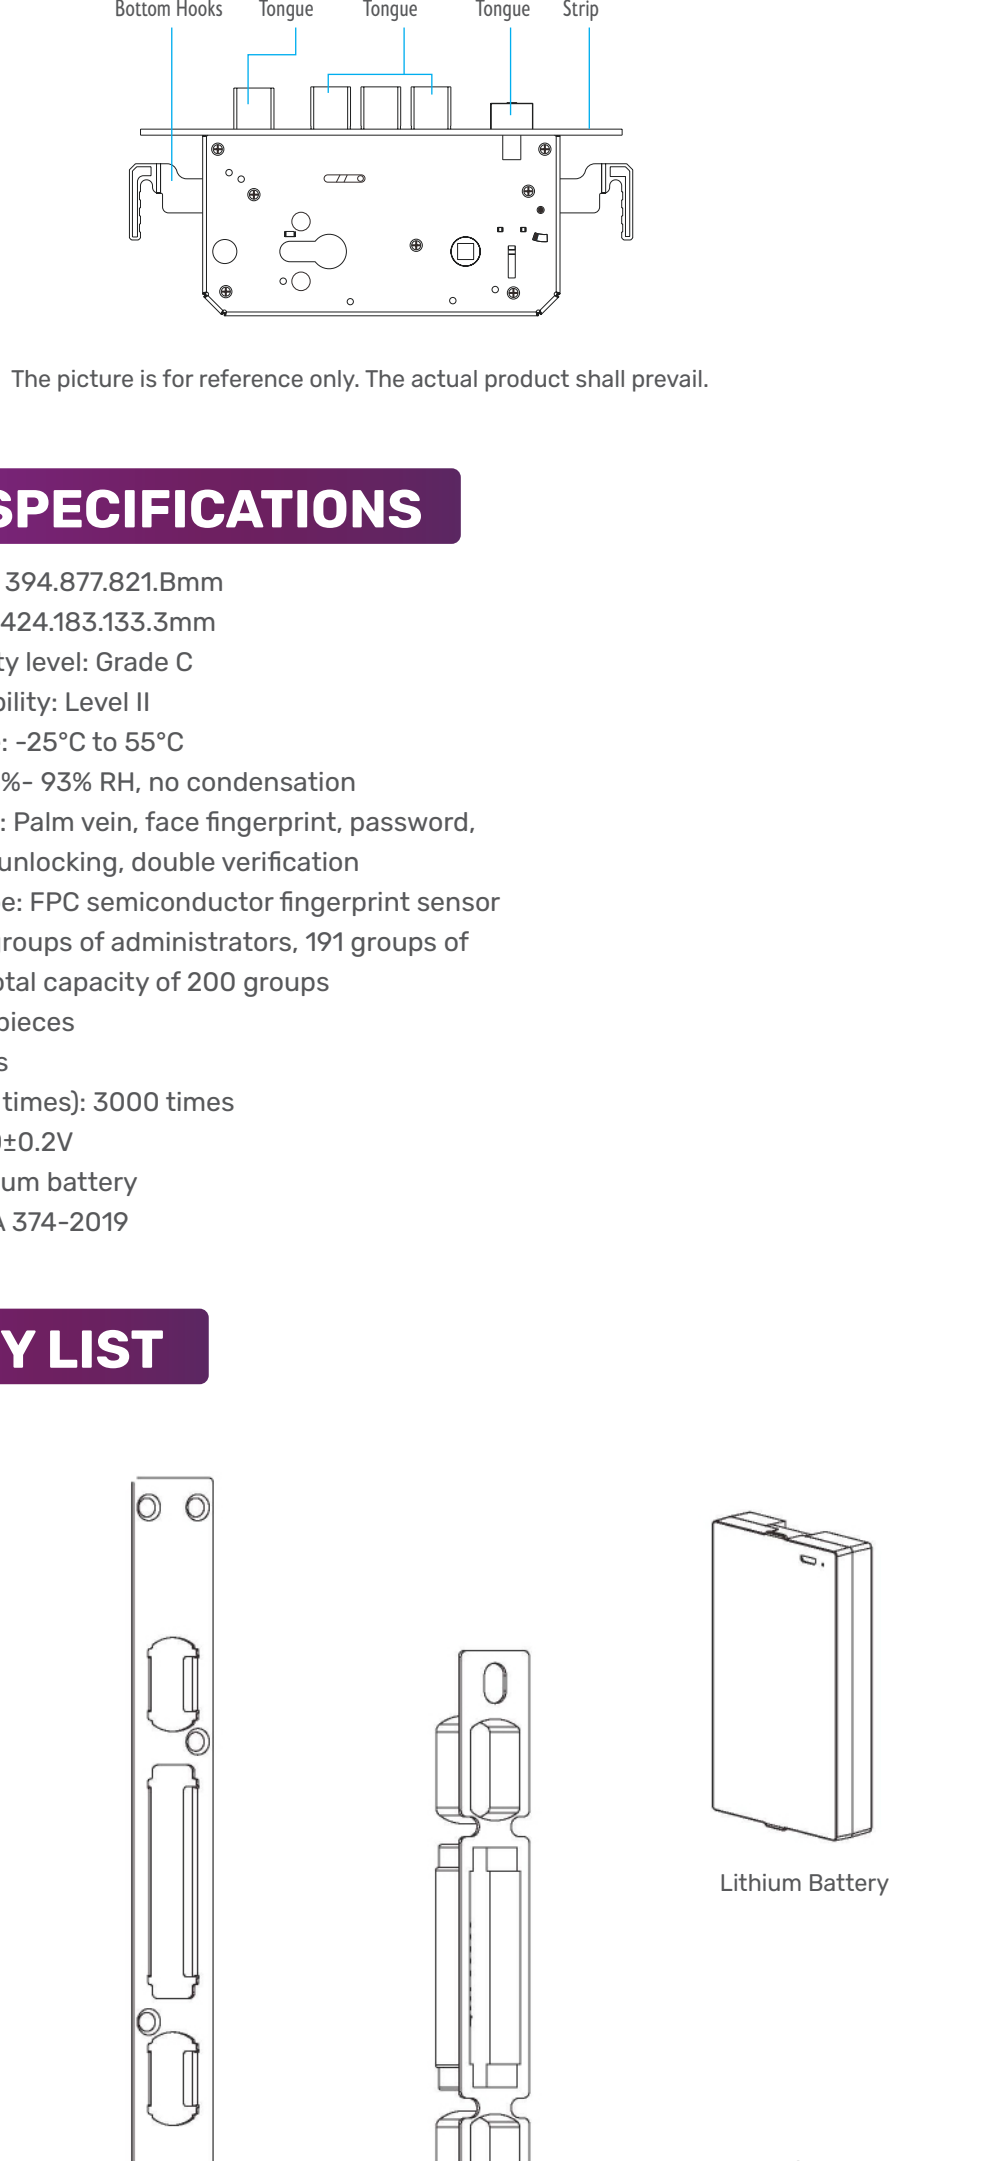


The picture is for reference only. The actual product shall prevail.

PRODUCT SPECIFICATIONS


- Outer lock dimensions: 394.877.821.8mm
- Inner lock dimensions: 424.183.133.3mm
- Smart door lock security level: Grade C
- Environmental adaptability: Level II
- Operating temperature: -25°C to 55°C
- Operating humidity: 25%-95% RH, no condensation
- Door opening methods: Palm vein, face fingerprint, password, card, key, App, remote unlocking, double verification
- Fingerprint module type: FPC semiconductor fingerprint sensor
- Total user capacity: 9 groups of administrators, 191 groups of general users, with a total capacity of 200 groups
- Fingerprints: Up to 50 pieces
- Faces: Up to 100 pieces
- Service life (number of times): 3000 times
- Low battery alarm: <7.0±0.2V
- Power supply: 7.4V lithium battery
- Executive standard: GA 374-2019

ACCESSORY LIST

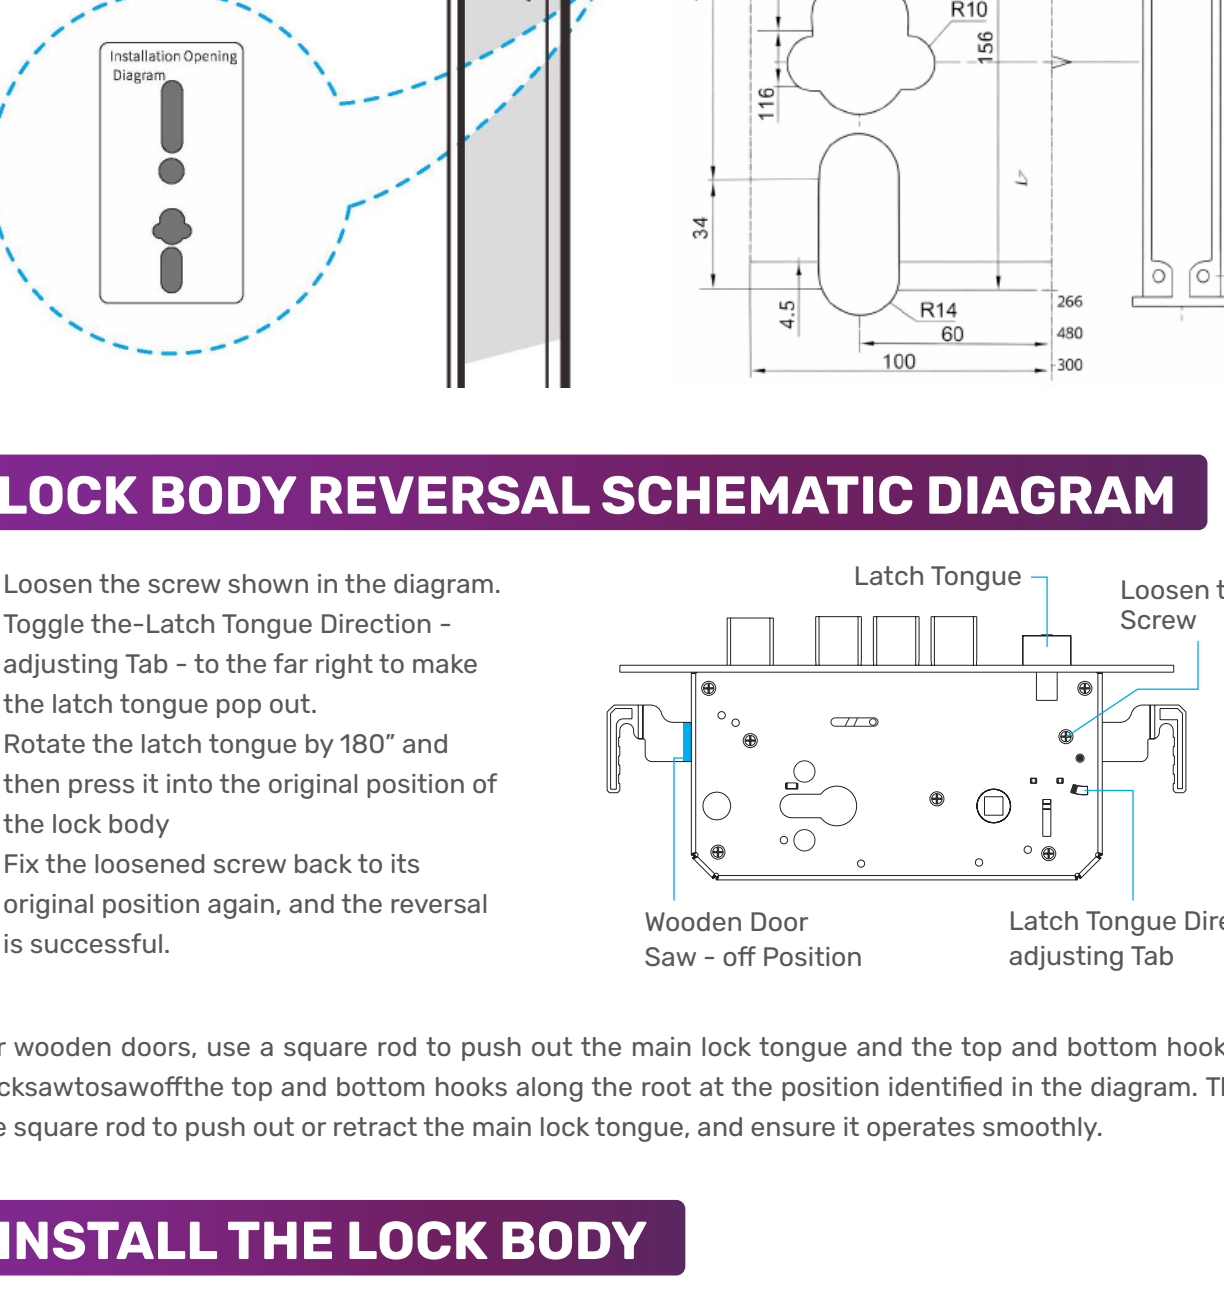


- Select accessories of different specifications according to the thickness of the door
- The accessory package configured by default from the factory is suitable for doors with a thickness of 45-100mm. If other specifications are needed, please contact the merchant.

DOOR OPENING DIRECTIONS

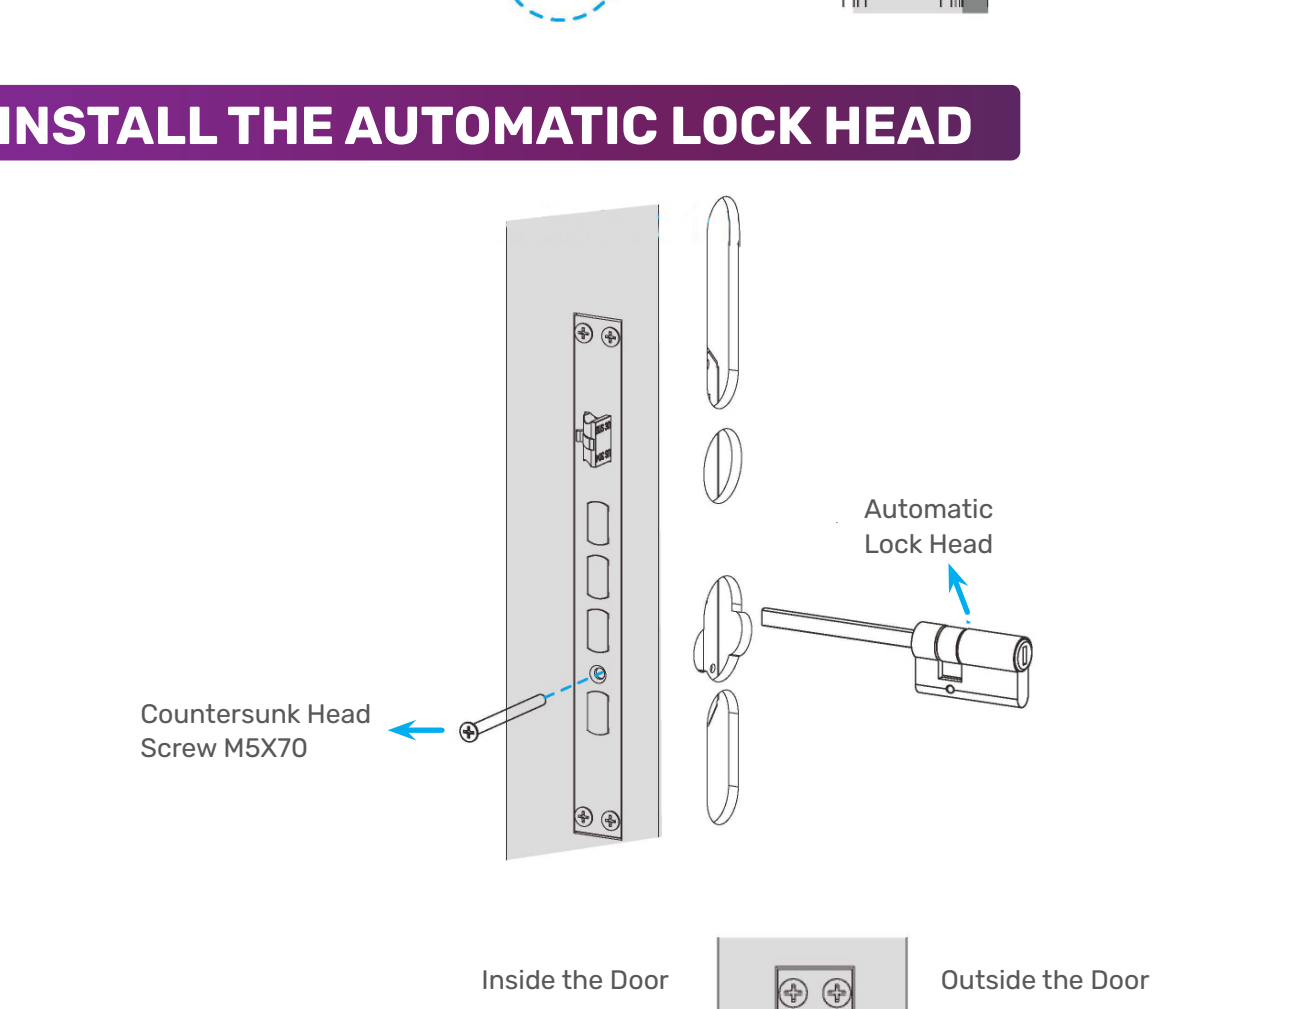


DOOR DRILLING DIAGRAM

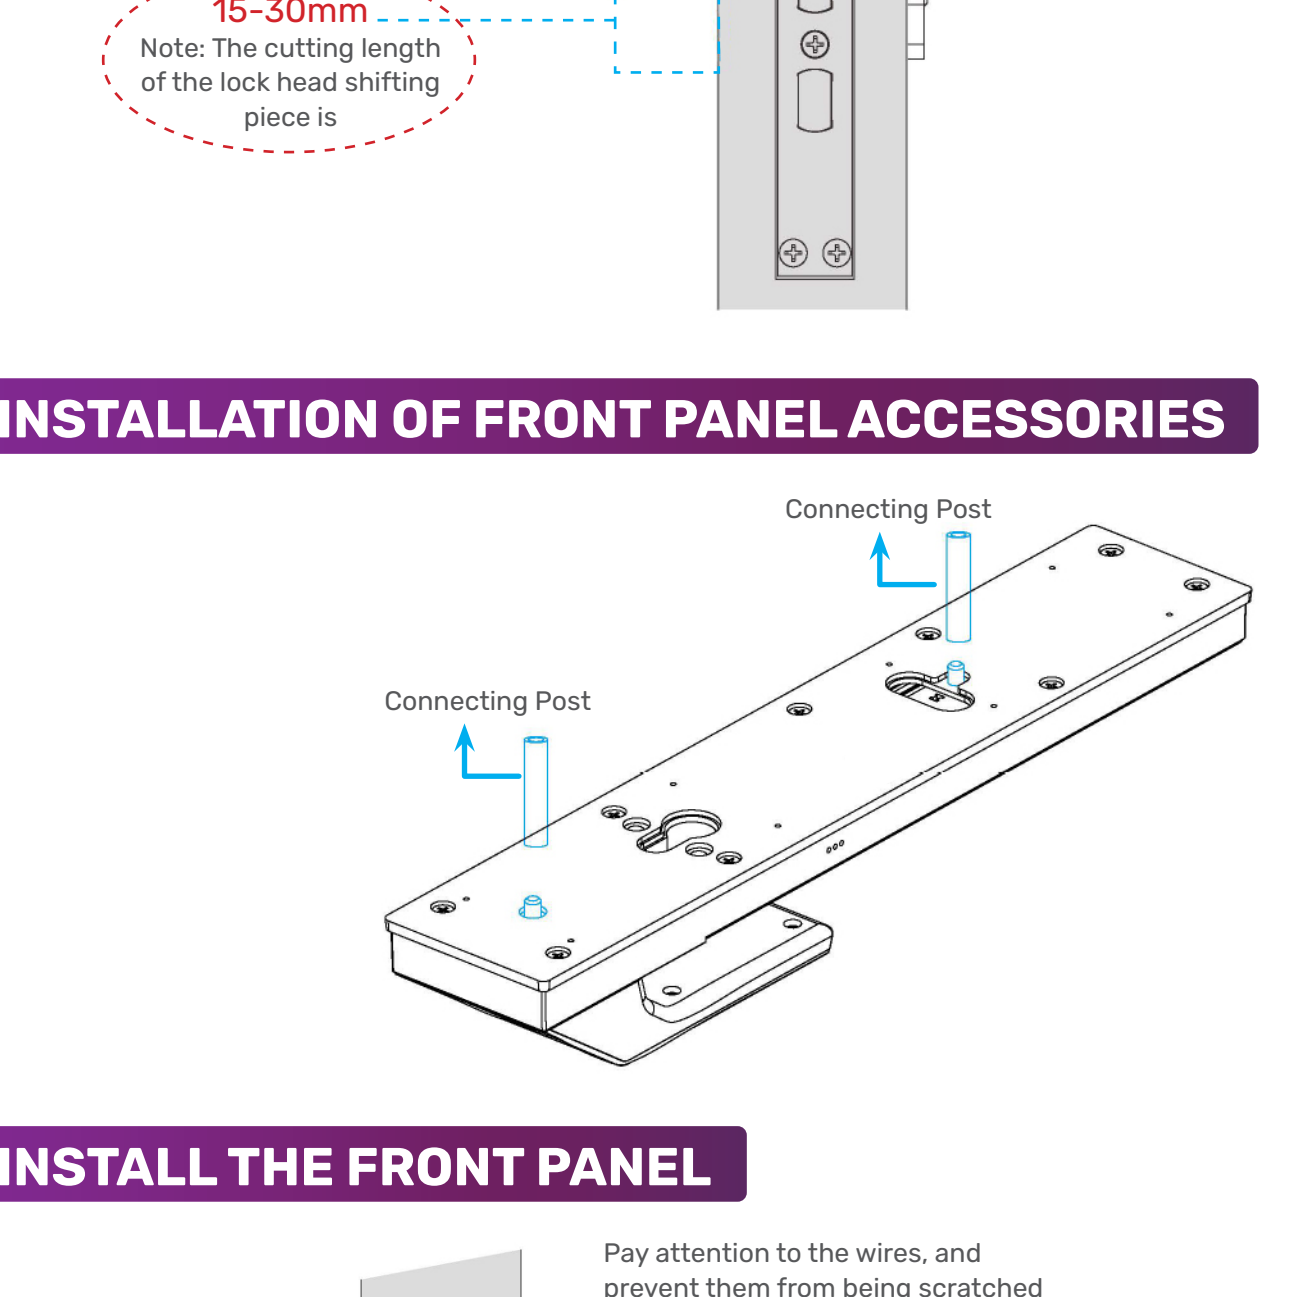

LOCK BODY REVERSAL SCHEMATIC DIAGRAM


- Loosen the screw shown in the diagram.
- Toggle the Latch Tongue Direction - adjusting Tab - to the far right to make the latch tongue pop out.
- Rotate the latch tongue by 180° and then press it into the original position of the lock body
- Fix the loosened screw back to its original position again, and the reversal is successful.

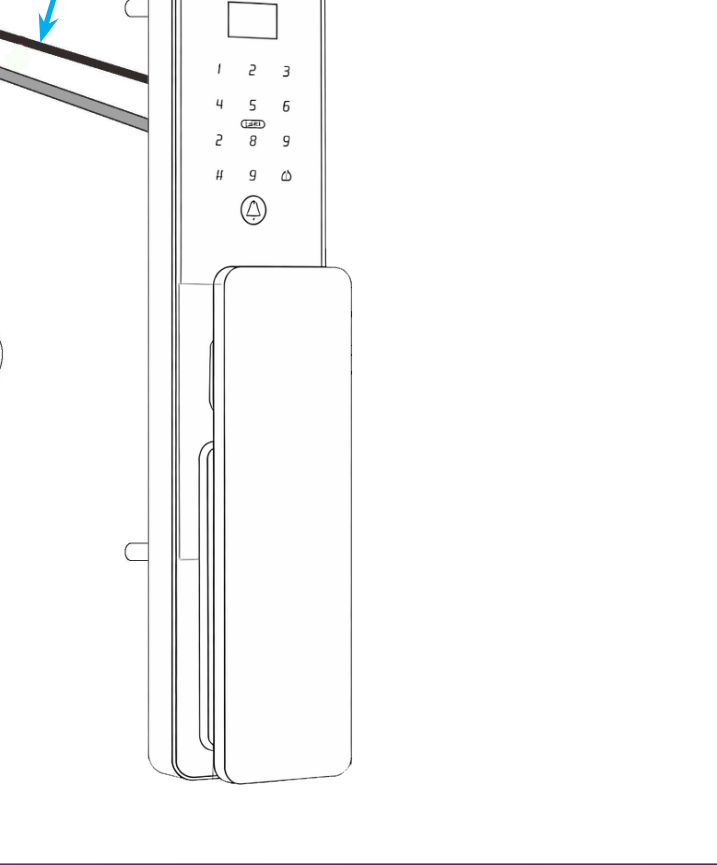


For wooden doors, use a square rod to push out the main lock tongue and the top and bottom hooks. Use a hacksaw to saw off the top and bottom hooks along the root at the position identified in the diagram. Then, use the square rod to push out or retract the main lock tongue, and ensure it operates smoothly.

INSTALL THE LOCK BODY


For anti-theft doors, use MS X10 Screws; for wooden doors, use M4 X 20 self-tapping screws

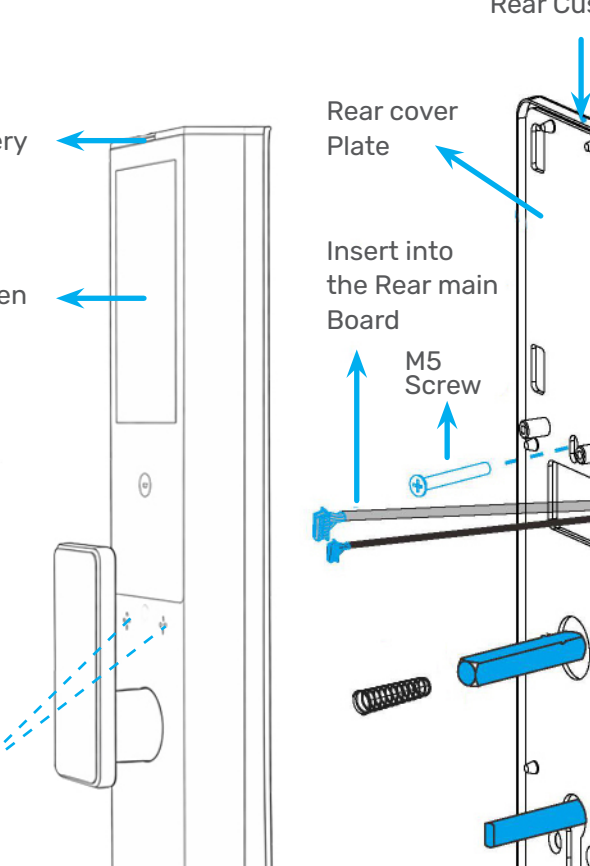


INSTALL THE AUTOMATIC LOCK HEAD

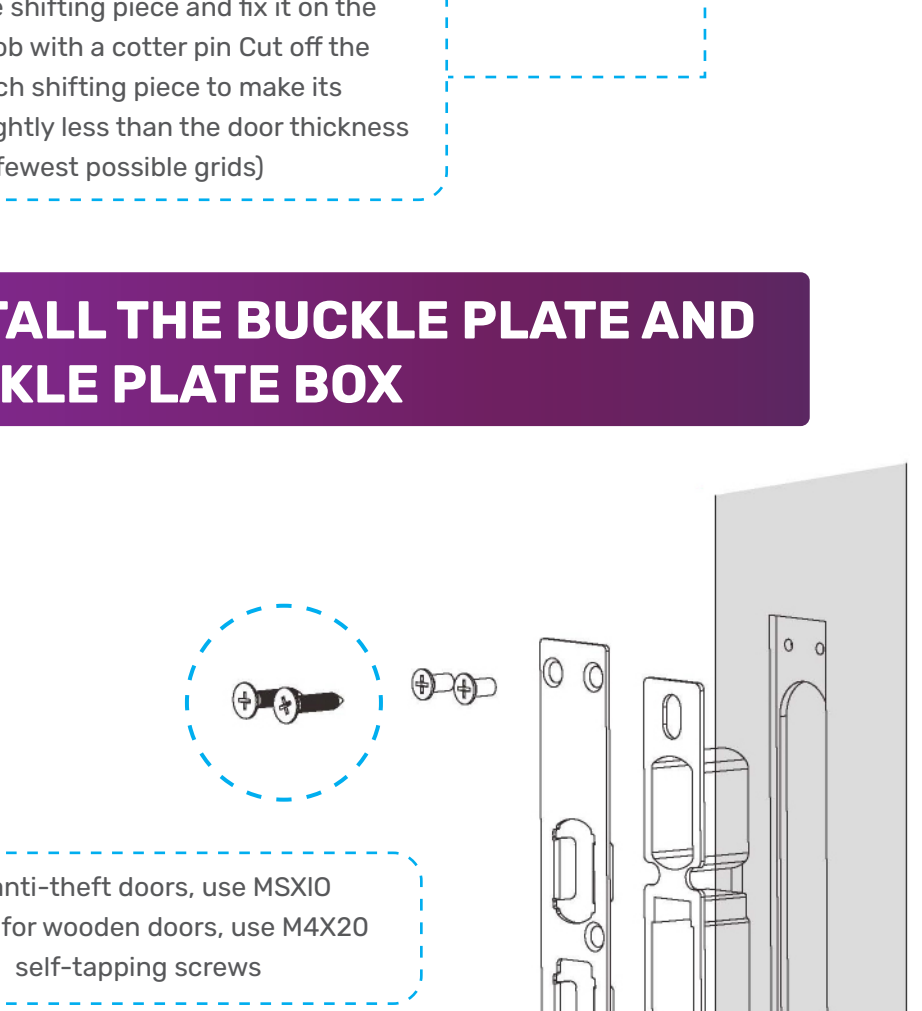

INSTALLATION OF FRONT PANEL ACCESSORIES

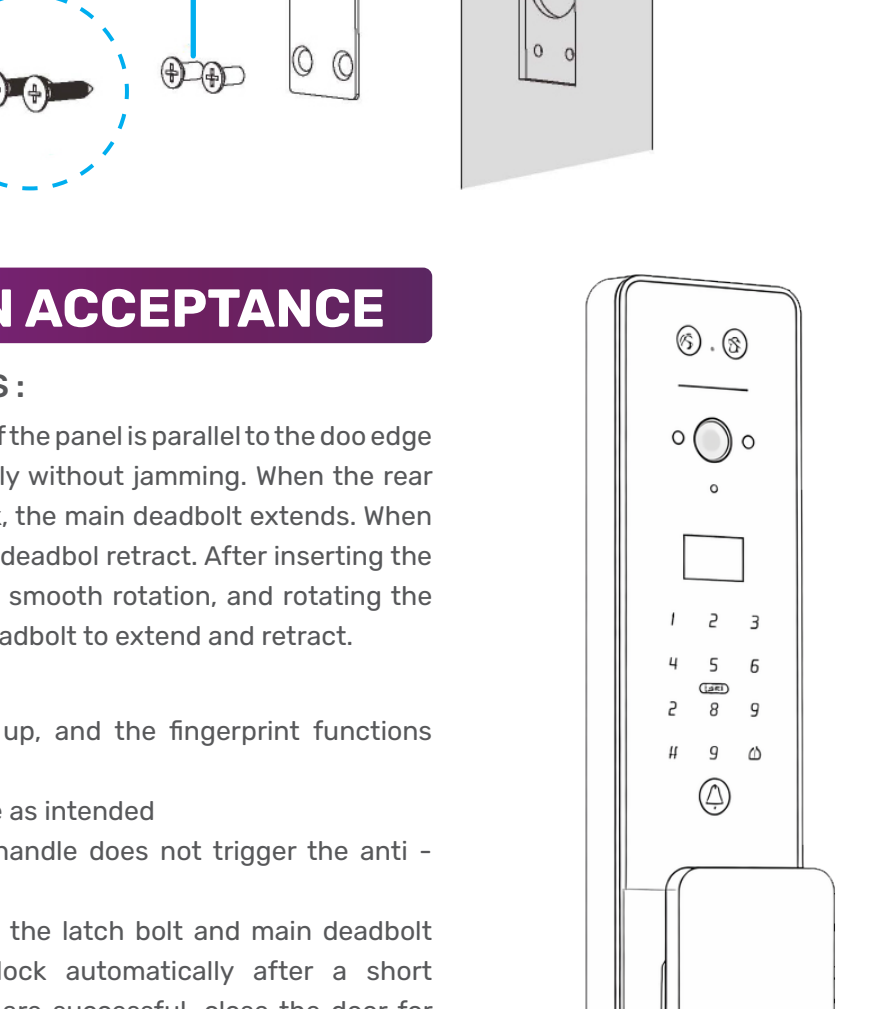


INSTALL THE FRONT PANEL

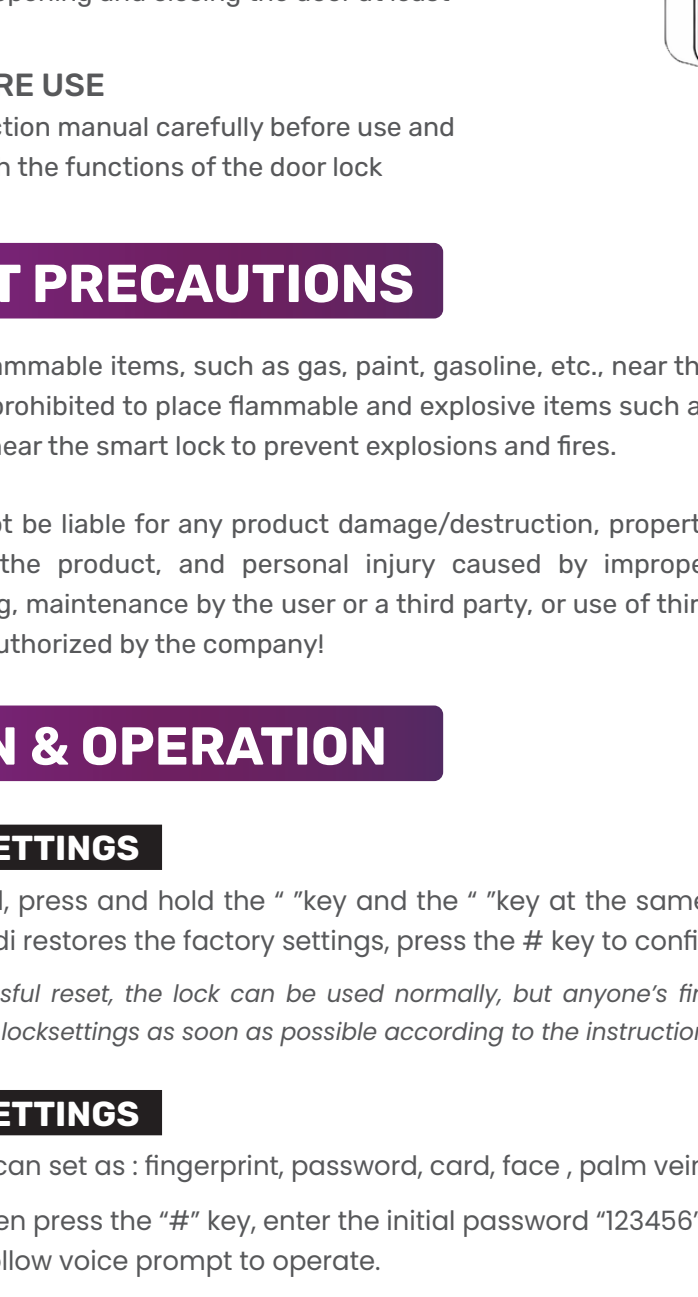


INSTALLATION OF THE REAR PANEL, BATTERY, AND BATTERY COMPARTMENT COVER

- First, use MS screws to fix the rear panel and the rear cushion.
- Then insert the connecting wire into the interface of the main board at the back.
- Put in the square shaft (insert the end of the square shaft that is shorter from the "ear" into the lock body), and place the square shaft spring into the square shaft hole of the panel (insert the large end first);
- Put on the rear panel, and it must be aligned with the square shaft, the safety plate, and the lock head shifting piece; use three M4 screws to fix the front panel
- Then install the battery and the battery compartment cover.

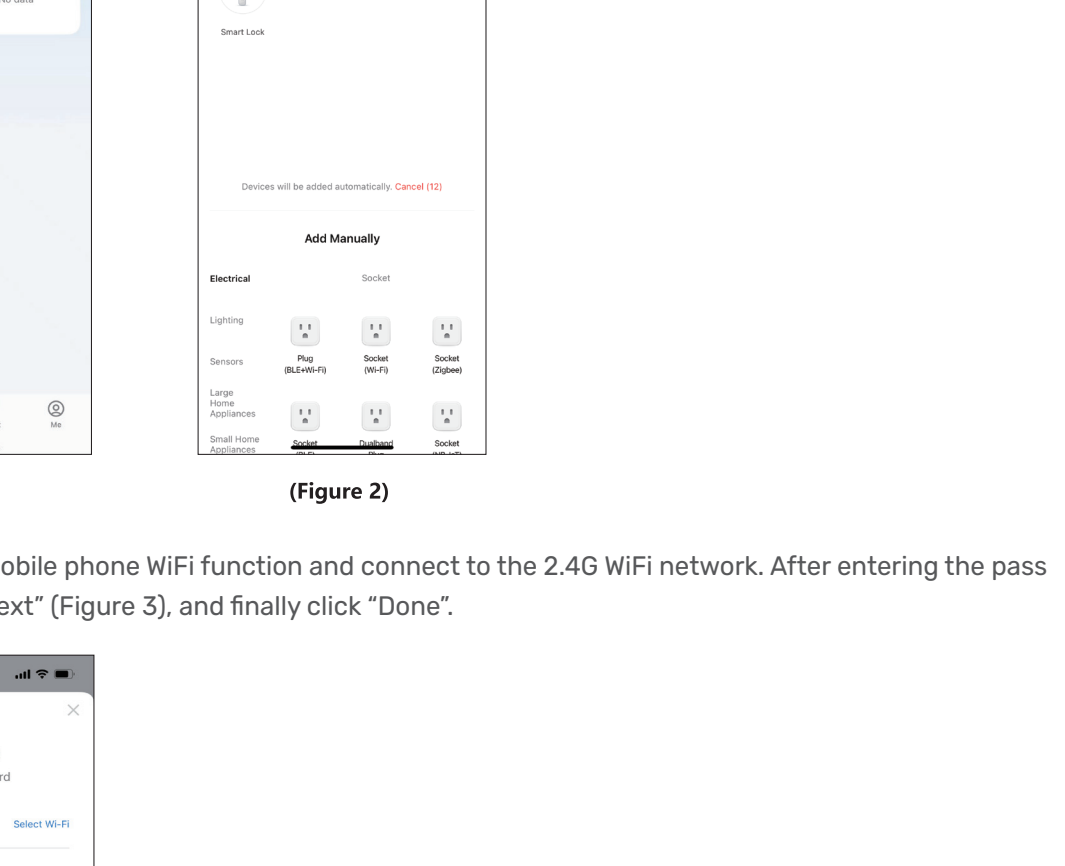

Install the shifting piece and fix it on the safety knob with a cotter pin. Cut off the safety latch shifting piece to make its length slightly less than the door thickness (with the fewest possible grids)

INSTALL THE BUCKLE PLATE AND BUCKLE PLATE BOX

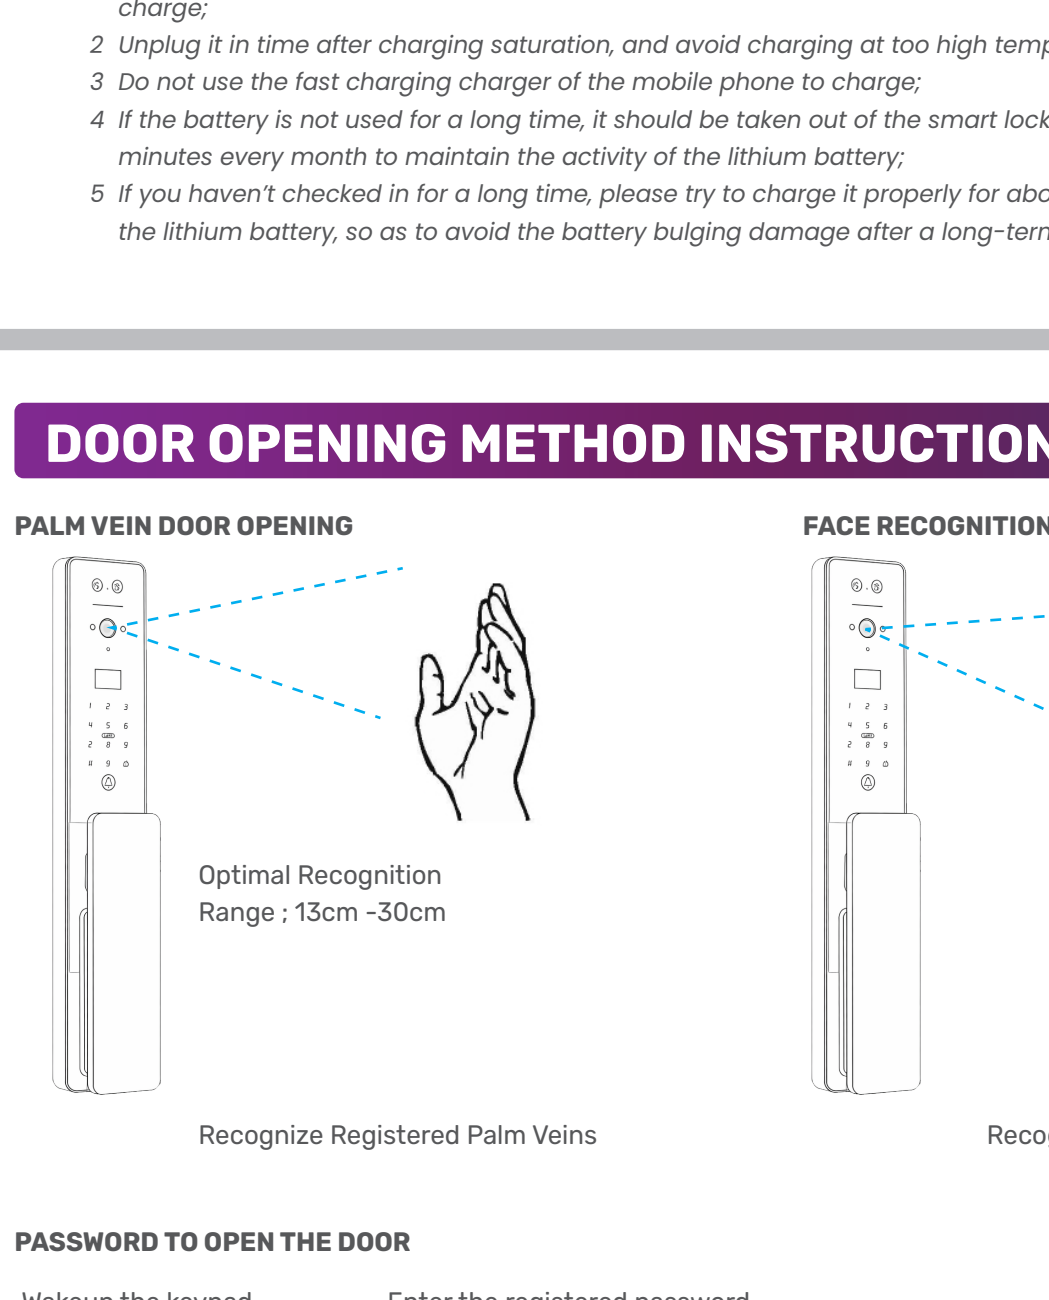

INSTALLATION ACCEPTANCE

ACCEPTANCE STANDARDS:

Before Power-on: The edge line of the panel is parallel to the door edge. The rear handle rotates smoothly without jamming. When the rear handle is rotated upward to lock, the main deadbolt extends. When rotated, the latch bolt and main deadbolt retract. After inserting the key, the door can be opened by smooth rotation, and rotating the safety knob allows the safety deadbolt to extend and retract.

AFTER POWER-ON

- Properly - panel keys light up, and the fingerprint functions function
- The function buttons operate as intended
- Forcefully pulling the front handle does not trigger the anti-theft alarm
- After successful verification, the latch bolt and main deadbolt retract automatically and lock automatically after a short while. After the above steps are successful, close the door for acceptance
- After closing the door, the latch bolt, main deadbolt, and safety deadbolt can all extend and retract smoothly.

Note: The top and bottom deadbolts move in sync with the main deadbolt.

INSTALLATION ACCEPTANCE

- After setting up face recognition, passwords, fingerprints, and cards, confirm that the registered information can unlock the door lock (including the mechanical key)
- After installation, test opening and closing the door at least three times

PRECAUTIONS BEFORE USE

- Please read the instruction manual carefully before use and familiarize yourself with the functions of the door lock

IMPORTANT PRECAUTIONS

Do not store or use flammable items, such as gas, paint, gasoline, etc., near the smart lock. Also, it is prohibited to place flammable and explosive items such as alcohol and gasoline near the smart lock to prevent explosions and fires.

The company shall not be liable for any product damage/destruction, property damage other than the product, and personal injury caused by improper installation, debugging, maintenance by the user or a third party, or use of third-party modules not authorized by the company!

FUNCTION & OPERATION

INITIALIZATION SETTINGS

In the indoor panel, press and hold the "key" and the "key" at the same time, and hear the voice broadcast: "Didi Didi restores the factory settings, press the # key to confirm."

Note: After a successful reset, the lock can be used normally, but anyone's password can be recognized. Please complete the lock settings as soon as possible according to the instructions.

INITIALIZATION SETTINGS

The administrator can set as: fingerprint, password, card, face, palm vein.

Press the "key", then press the "# key", enter the initial password '123456', press the "# key" to enter the settings, and follow voice prompt to operate.

GENERAL USER SETTINGS

General user can set as: fingerprint, password, card, face, palm vein.

Press the "key", then press the "# key", enter the administrator password, press the "# key" to enter the settings, and voice prompt follow to operate.

NETWORK SETTINGS

- Operate on mobile phone, download Tuya APP, register an account;
 - On the door lock, press the "key" and then the "# key" to enter administrator information. Press "2" to enter the system setting page.
- The operation as following.

- Go back to the SmartLife APP login account and allow access to Bluetooth permissions.
- Click the + sign in the upper right corner (Figure 1), search for devices waiting for connection, and then click "Add" (Figure 2).

- Turn on the mobile phone WiFi function and connect to the 2.4G WiFi network. After entering the pass word, click "Next" (Figure 3), and finally click "Done".

REPLACE THE BATTERY

Please replace the battery in time in the following situations: battery replacement warning; Voice prompts low battery.

Notes:

- Charge in time when there is no electricity, and use 5V2A charger that meets the national standard to charge;
- Unplug it in time after charging saturation, and avoid charging at too high temperature;
- Do not use the fast charging charger of the mobile phone to charge;
- If the battery is not used for a long time, it should be taken out of the smart lock and charged for about 10 minutes every month to maintain the activity of the lithium battery;
- If you haven't checked in for a long time, please try to charge it properly for about 1-2 months to activate the lithium battery, so as to avoid the battery bulging damage after a long-term power loss.

DOOR OPENING METHOD INSTRUCTIONS

PALM VEIN DOOR OPENING

FACE RECOGNITION TO OPEN THE DOOR

PASSWORD TO OPEN THE DOOR

SMART CARD TO OPEN THE DOOR

EMERGENCY KEY DOOR OPENING

When turning the handle, be careful of the handle corner

LITHIUM BATTERY CHARGING METHOD

IT IS RECOMMENDED TO USE A MOBILE PHONE 5V CHARGER

- During charging, it shall not be higher than the maximum charging voltage; during discharging, it shall not be lower than the minimum working voltage.
- Before charging, the lithium battery does not need to be specially discharged.
- During charging, the lithium battery red light is always on and remains on when fully charged.
- To not damage the battery life, it is best to charge slowly.
- When the lithium battery's red light flashes, it indicates that the battery has a certain low.
- If the lithium battery is not used for a long time, ensure the battery voltage is 8.4V.
- A7.4 V lithium-ion Battery is fully charged to 8.4 V.)
- *The battery will have safety hazards. To ensure the effective safety functions of the electrical appliance, do not disassemble the battery conduct any inspections.

PEEPHOLE OPERATION INSTRUCTIONS

WARRANTY AND SERVICE

FRIENDLY REMINDER

If your smart lock malfunctions, contact your seller or call the customer service hotline. Before on-site service, please provide the following information: detailed address and phone number, fault description, purchase and receipt dates, product model, product serial number. The above information helps to better serve you and can also save you unnecessary expenses.

WARRANTY INSTRUCTIONS

- The warranty service only covers product quality issues under normal use as per this product manual. The warranty does not apply to product damage or destruction caused by any of the following situations: CD Caused by human factors
- Improper installation, commissioning, or use not in accordance with this product manual;
- Unauthorized repair, modification/alteration of the product (including damage to anti-tamper labels, except for normal wear and tear);
- Caused by user intent or negligence;
- Force majeure;
- All damage and losses caused by product usage environment conditions (e.g., power supply, temperature, humidity, electric field, magnetic field, etc.) that are beyond the company's control and are not covered by the free warranty;
- Other reasons not attributable to the product's own quality.

THANK YOU FOR YOUR PURCHASE

We're honored you chose AUTOM8

Experience the perfect blend of SECURITY, TECHNOLOGY, AND ELEGANCE.

Welcome to the Future of Smart Living.