



REGISTER 2 FINGERPRINT FOR THE 1st TIME

Before registered any fingerprint can unlock.

1. Unlock the lock with the fingerprint you want registered, and don't release the finger until the blue light on
2. Press the same finger on different position about 10 times then the green light on (if 2 times the same position, the light will be red color)
3. Registered the second fingerprint when the green light on, do the above step again, when it success, the green light off.

REGISTER MORE FINGERPRINT


1. Unlock the lock don't release until the blue light on
2. Use the new finger press the lock several times until the blue light off then stop.

It will be failed if over time, then need do above step again.

EMERGENCY CODE SETTING (MORSE CODE)

1. After setting the fingerprint. Unlock the lock and don't release the finger until the light on white color, then release the finger, the light will be green color.
2. when the light on green color, begin setting the 1st number of the Morse code, pressing one time means number 1, pressing two times means number 2, For example, the 1st number you want it be 5, then you press your finger 5 times. then stop pressing and waiting the light change to blue color.
3. when the light on blue color, use the same finger setting the 2nd number of the Morse code. For example the 2nd the number is 6, then you press 6 times, then stop pressing and waiting the light off.
4. when the light off, please do remember the number you set on green light and blue light. That is the Morse code.

ASSEMBLING DRAWING

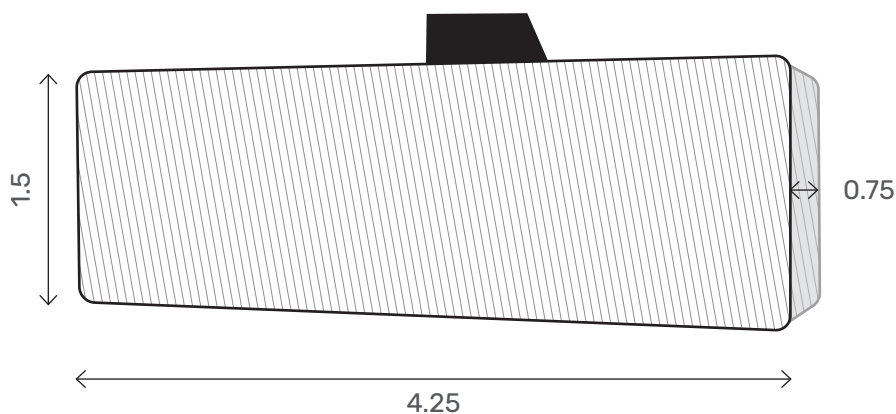

THANK YOU FOR YOUR PURCHASE

We're honored you chose **AUTOM8**

Experience the perfect blend of
SECURITY, TECHNOLOGY, AND ELEGANCE.

Welcome to the Future of Smart Living.